


## HOLD DOWN STRAP INSTALLATION INSTRUCTIONS

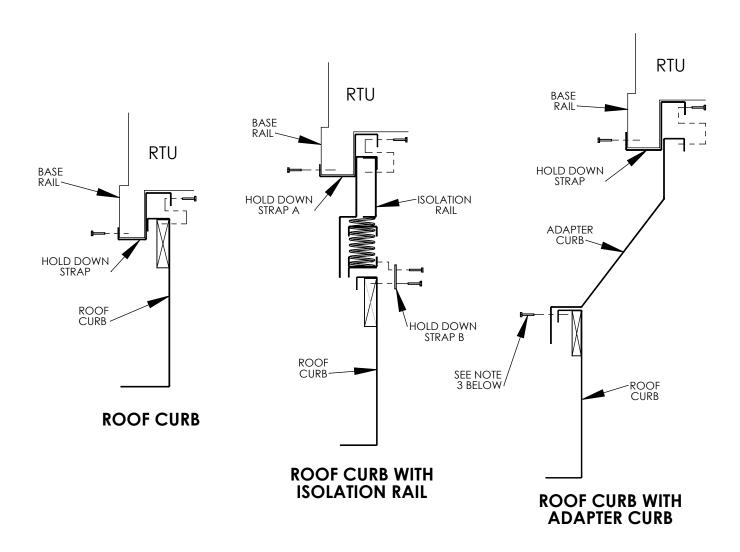

- 1. **HOLD DOWN STRAP MATERIAL:** 14 GA. GALVANIZED STEEL.
- 2. **RECOMMENDED FASTENER:** #12 X 1.5" TEK SCREW
- 3. **RECOMMENDED FASTENER SPACING BASED ON LONGEST FLANGE AS FOLLOWS:** 0'-7' = 12"OC; 7' 12' = 8"OC; 12' 20' = 6"OC; 20' 30' = 4"OC

\*Note: These instructions are meant to be used as a general guide only. Variations may occur.

Have further questions? Give us a call at 404-366-2215. We are here to help!